



Retail/Restaurant @dVantage™ Nurit (Dial & Wireless) Menu Guide

Press MENU/ESC to access or exit menu. Press RETURN and FORCED to scroll through menu options.

1. REPORTS		
1	DEFAULT REPORT	Print programmed default report
2	CURRENT REPORT	Print report of daily transactions with several options
3	HISTORY REPORT	Print previous batch totals within the past 30 days
4	DISPLAY TRANSACTION	Display daily transactions by transaction number
5	RECEIPT COPY	Print copy of a transaction receipt
6	PERFORMANCE REPORT	Print Approvals, Denials, Disconnects, Manuals, and Swipes
7	TIP REPORT	Print tip amounts
8	REPORT SETUP	Gives option to print Visa/MC separately or together

2. MERCHANT PARAMS		
1	AUTHORIZATIONS	Enable or disable different transaction/card types
2	SECURITY LEVEL	Set security levels for different operations
3	EDIT HEADER	Edit header, up to 5 lines
4	EDIT TRAILER	Edit footer, up to 5 lines
5	SET CASH EDC	Enable recording of cash transactions
6	MERCHANT FEE	Enable surcharge for debit transactions
7	SET BATCH TIME	Change batch time for Host Auto Close mode
8	SRVR/CLRK/INVOICE	Add server/clerk/invoice IDs to transaction. 1=Off, 2=On
9	SITE ID	View or change site ID

3. MERCHANT OPTIONS		
1	PAPER TYPE	Select Single Ply, Double Ply, or Customized (2 receipts print if set to Single Ply)
2	NO-PAPER MODE	Set terminal to print no receipt
3	BUZZER SET	Enable/disable tone when pressing keyboard keys
4	OPERATION MODE	Toggle terminal to Normal or Demo mode
5	BATTERY SAVER	Select 1=Off, 2=Radio Only, 3=Radio and Auto Off, 4=Auto Off Only
6	PRINT DISCLAIMER	Print credit disclaimer on receipt
7	SET MENU TYPE	Select autoscroll or manual scroll
8	SET HALO	Set maximum limit for sale or refund transaction
9	PRINT SETUP	Print terminal setup report
10	STORE AND FORWARD	Access the Store and Forward menu
11	CHECK READER	Select Check Reader type
12	BRIDGE COMM	Not supported on the 3010

4. HOST PARAMETERS		
1	HOSTS PARAMS	Select 1.1. Global Bank ID, 1.2. Global Merchant ID, 1.3. Global CDD prompt, 1.4. Name CDD prompt, 2.1. Check Merchant ID, 2.2. Check Bank ID, or 2.3. Check Dual ID
2	HOSTS PHONE	Edit host phone numbers for 1. Credit, 2. Debit, or 3. Check
3	PRNT EDC SETUP	Print report of host information and phone numbers
4	PROTOCOL VERSION	Display host protocol name and version
5	AUTODIAL SETUP	Set up Auto-Dial function
6	HOST RADIO ADDRESS	Display host radio address in TCC (Wireless Only)

5. SYSTEM OPTIONS		
1	SET TIME/DATE	Set terminal's date (MM/DD/YY) and time (HH:MM:SS)
2	EDIT PIN KEY	Edit host processor working key
3	SEL. MSTR KEY	Change Master Key location
4	SET BATCH NO.	Change batch number
5	EDIT DATABASE	Void transaction, clear database for selected EDC type
6	WORKING MODE	Retail: AVS options
7	TEST MODE	<i>Programming purposes only</i>
8	PREDIAL CALL	Set terminal to dial once card is swiped
9	PINPAD INITIALIZATION	Allow initialization of PIN pad
10	PINPAD FUNCTION	Allow encryption of working key into terminal
11	PINPAD CONFIGURATION	Select internal or external PIN pad
12	SEL.MAC KEY LOC	Select the memory location of the MAC key
13	STATUS BAR	Displays battery and radio icons, 1=Off, 2=On (Wireless Only)

6. RADIO PARAMS (Wireless Only)		
1	RADIO TESTS	View Radio RSSI, Terminal MAN #, or other Radio Info
2	PRINT PARAMS	Print radio information
3	BATTERY TEST	Test the battery

7. DOWNLOAD		
1	PARAMETERS	Download host and merchant parameters
2	AUTOLOAD	Download full application and parameters
3	APPLICATION ONLY	Download application only, no parameters
4	COMM.PARAMETERS	Set communication parameters for downloading

8. COMMUNICATION		
1	MIN. RETRIES	Set number of times the NURIT calls host processor
2	DIAL: TONE/PULSE	Set pulse or tone (DTMF) dialing
3	EXCHANGE PREF	Program an exchange prefix before a number, if needed
4	GATEWAY	<i>Programming purposes only</i>
5	SUFFIX	Program a suffix at the end of a number, if needed
6	VIA:LINE/RADIO	Enable radio and phone, or phone only
7	CHECK LINE: ON/OFF	Turn check line function on or off
8	DIALTONE CHECK: ON/OFF	Turn dial-tone check function on or off

Note: You can also edit certain operating-system parameters in the NOS Menu.